



ZPUTM-5000

Acquisition Unit

User's Manual for ZOOM Version 7.3







Safety Information

This product is designed and tested in accordance with EN 61010-1 (2001) standards. The following manual contains information and warnings. They must be followed in order to keep the instrument in a working condition and ensure safe operation.

Safety and Electrical Symbols

4	Warning - Danger - Identifies conditions or practices that could cause physical harm.
<u> </u>	Caution - Identifies conditions or practices that could result in permanent loss of data or damage the equipment
0	Important Information - Must be read and followed
~	Alternating Current
丰	GND or earth ground
	Protective conductor terminal
4	Electronics common - not linked to earth ground
↓ iso	Isolated common - not linked to earth ground, nor electronics common
<i>—</i>	Shield connection location
CAT I	Overvoltage (installation or measurement) Category 1

NOTICE: Trademarks referenced herein are trademarks and registered trademarks of VibroSystM Inc. or third parties, and are the property of their respective owners. Third party trademarks are used for identification purposes only and shall not be construed as indicative of any relationship or endorsement between VibroSystM Inc. and the third parties.

This manual is provided solely for guidance. VibrosystM Inc. takes no responsibility or liability for any damage caused by accidents, improper installation or misuse. Liability is limited to the repair and/or replacement of defective products.

VibroSystM Inc. 2727 Jacques-Cartier E. Blvd, Longueuil, QC, Canada J4N 1L7 | Phone: 450 646-2157 | U.S. Toll-free Line: 800 663-8379 Email: techsupp@vibrosystm.com | www.vibrosystm.com





Safety Precautions

- Although most instruments and accessories are normally used at non-hazardous voltage levels, hazardous conditions may still be present in some situations.
- This product is intended to be used by qualified operators and maintenance personnel who
 recognize shock hazards and are familiar with the safety precautions required to avoid possible
 injury. Carefully read and follow all installation, operation, and maintenance information before
 using this product.
- Install and use this instrument only as specified in this manual or the protection provided by this instrument might be impaired.
- Do not use this instrument in wet environments.
- When in doubt that safety protection has been impaired, make this instrument inoperative and secure it against any unintended operation.
- · Have this instrument serviced by qualified service personnel only.
- To avoid shock hazards, connect the power supply to a properly grounded power source. If a twoconductor power cord is used, a protective grounding wire must be connected between the ground terminal and earth ground before connecting the power cord or operating the instrument.
- Never remove the cover or open the case without first turning off the main power source.
- Never operate this instrument with the cover removed or the case open.
- Use caution when working with voltages above 30 VAC RMS or 42 VDC. These voltages can cause shock hazards.
- Only use the replacement fuse(s) specified in this manual.
- Do not operate this instrument around explosive gas, vapor, or dust.

Measurement Category

This instrument is intended to be used with low-voltage measurements in Measurement Category I environment circuits.

Measurement, control and data I/O signals are either protected secondary circuits derived from mains or not directly connected to main voltages or voltage sources. This instrument is protected against transients up to 26V max.

Never connect this instrument to Measurement Category II, III or IV environment circuits.









TABLE OF CONTENTS

1.	GENERAL DESCRIPTION
	1.1 Available Software, Plug-ins, and Possible Measurements1.2 Features and Functions1.3 Front View
	1.4 Rear View
	1.5 Typical Module Installation
2	INCTALLATION
۷.	INSTALLATION
	2.1 Preliminary Considerations Before Installing the ZPU–5000 in a Cabinet or Enclosure2.2 Powering the ZPU–5000 Unit
	2.2.1 Main Power Input
	2.2.2 Protective Conductor Terminal
	2.3 Dual-Channel Analog Input / Output Modules
	2.3.1 Processes for Trend Outputs
	2.3.2 Input Types and Module Specifications
	2.3.3 Output Connections and Specifications
	2.4 Control Module
	2.4.1 Control Module Connections and Specifications
	2.5 Communication Module
3	USING THE ZPU-5000 UNIT
٥.	3.1 Front Panel LED Indicators
	3.2 Startup (Boot Sequence)
	3.3 Manual Firmware Update
	3.4 Display During Normal Operation
	3.4.1 Accessing Frequency Band Parameters
	3.4.2 Accessing Air Gap Parameters
	3.5 ZPU–5000 Controls
	3.5.1 User Interface
	3.5.2 Keypad
	3.6 ZPU-5000 Menus
	3.6.1 Browsing Through the Menus
4	TROUBLE COLOCTING
4.	TROUBLESHOOTING
	4.1 Power Supply
	4.2 Boot-Up
	4.3 Network Connection
	4.4 Analog Input / Output Modules
	4.5 CTRL-100 Module









1. GENERAL DESCRIPTION

The ZPU–5000 is a multi-channel acquisition unit designed for monitoring and protecting large rotating units such as turbo-generators, hydroelectric generators, and large motors. it can simultaneously monitor multiple parameters and communicate with the ZOOM[®] software.

The ZPU–5000 is usually installed in a network configuration that includes a server and executes complete online monitoring, analysis, protection, alarm management, and trending of large rotating units. The ZPU–5000 can also be run in a standalone configuration.

Important Information

• The information found throughout this manual applies to ZOOM version 7.3 only.

1.1 Available Software, Plug-ins, and Possible Measurements

ZOOM Software Suite	
	ZOOM Server
	ZOOM Configuration
	ZOOM Application
	ZOOM Server Status
	ZOOM Update
Available Plug-ins	
	ZOOM ZPU5000
	ZOOM ThermaWatch® Stator
	ZOOM Modbus [®]
	ZOOM OPC
Possible Measurements	
	Pole
	Sampling
	Trending
	Alarm





1.2 Features and Functions

The ZPU–5000 executes various types of measurements in both automatic and manual mode. It also processes data, verifies alarm conditions and transmits information to the server running the ZOOM software for rapid data interpretation of unit condition. The ZPU–5000 uses high-speed TCP/IP communication protocols to communicate with the server.

The ZPU–5000 can synchronize the acquisition of all parameters with the passing of each rotor pole for salient pole units. It tracks up to 16 high speed inputs (air gap, displacement, vibration, etc.) from standstill to over-speed conditions. It is also possible to interconnect additional ZPUs to extend monitoring range and capabilities.

The ZPU–5000 is linked via its 10/100 Mbps Ethernet port to a network that includes the server. It can also be operated locally in a standalone configuration without connection to a server.

1.3 Front View



Vacuum Fluorescent Display (VFD)

The vacuum fluorescent display illustrates messages on a 256 x 128 dot grid. In **Menu** mode, the screen displays configuration information organized as browser menus. In **Monitoring** mode, real-time measurement values, text and bar graphs are displayed for identification.

2 Keypad

The 7-button keypad is ideal for browsing through the various displays. It allows the user to configure specific parameters.

The **MENU** button gives access to the unit's configuration menu for reviewing or changing configuration parameters. Once the unit has completed its boot-up routine and starts running in **Monitoring** mode, press the **MENU** button to toggle between **Monitoring** and **Menu** modes. In **Menu** mode, use the **ENTER** button to access sub-menu levels, register a selection, or enable/disable a feature. The **CANCEL** button is used to cancel a selection when a confirmation is requested. It is also used to move back within the menu, one sub-menu at a time.

Alarm Trigger LEDs

The **ALARM ACKNOWLEDGE** LED provides a visual notification that an alarm has been triggered.

The **CHANNELS ALERT/DANGER** LED provides an instant visual notification of preset alarm threshold violations on selected processed input channels.





4 OK LEDs

The CHANNELS OK LED confirms the integrity of the measuring chains (sensors and cables) and the input condition of all analog I/O modules. The **SYSTEM OK** LED confirms the integrity of the system's operation.

6 USB Port

The USB port allows connection of a portable storage device to copy or save the configuration or update the firmware.

Portable USB Flash Drive

The front panel features a USB port that accepts a portable flash drive. An entire system configuration and system firmware can be stored on the drive to be copied or upgraded. The drive can be inserted into the USB port while the unit is running.

Important Information

• U3 USB smart drives are not compatible with the ZPU-5000's operating system. Apart from this restriction, any portable USB flash drive formatted to FAT32 can be used.

A storable system configuration includes:


- System related information:
 - Analog input/output firmware;
 - Control module firmware;
 - Operating system;
 - All plug-in installations.

- Analog input/output parameters:
 - Input sensor type;
 - Input range;
 - Input units of measurement;
 - Processing:
 - Output range;
 - Output units;
 - Alarm thresholds.





1.4 Rear View

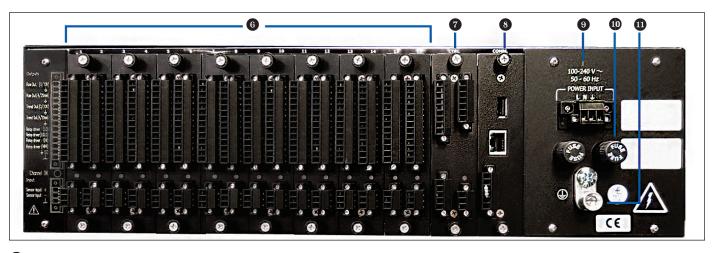

6 Analog I/O Modules

There are up to eight dual-channel analog I/O modules that receive and process signals from various sensors and conditioners. Each module is factory-configured to receive either current, voltage, or ICP (piezoelectric sensor) signals from two different sources to which a digital process is applied.

Each channel also provides four analog outputs and four open-collector outputs for controlling remote alarm relays.

Removable female screw terminal connectors allow quick connection for permanent wiring.

Control Module

This plug-in module supervises control and synchronization signals for the ZPU-5000 unit. Related inputs and outputs include:

- Synchronization inputs;
- Synchronization output;
- · Alarm inhibit;
- External trigger;
- · Acquisition trigger;
- Rotation;
- · "System OK" relay driver;
- "Channels OK" relay driver;
- Two relay drivers for optional configurations (configurable in the ZOOM software).

Communication Module

This module enables communication to various instruments:

- One Ethernet 10/100 Mbps port for communication with a server;
- One USB port (same function as the one on the front);
- One serial port for half-duplex RS-485 (TWS and Modbus RTU) or full-duplex RS-422 (Modbus RTU) communication.





9 Power Input

Provides an AC-input connection to the power supply.

A 3-position removable female type screw terminal connector allows AC power input wiring. The ZPU–5000 unit should be installed in compliance with national and local electrical standards.

Protection Fuses (2)


The ZPU–5000 acquisition unit relies on a dual fuse protection system. Replace only with the same type of fuse: 3.15A / 250V slow-blow, 5x20 mm.

Protective Conductor Terminal

The protective conductor terminal on the rear panel must be connected to a grounding point in compliance with local regulations. Grounding through the protective conductor terminal is essential for safety purposes. It also provides better efficiency against ESD and EMI disturbances.

1.5 Typical Module Installation

It is important to properly align the module before inserting it in the ZPU-5000. Follow appropriate guides located on the built-in rails. See illustration below for reference.

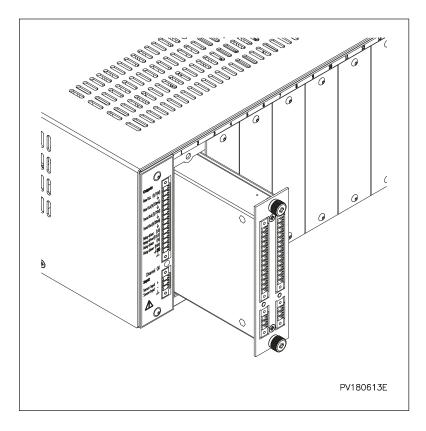





2. INSTALLATION

Although it is normally delivered installed, pre-cabled in a cabinet and part of a complete system, the ZPU-5000 acquisition unit can also be ordered separately as an addition to an existing installation.

2.1 Preliminary Considerations Before Installing the ZPU-5000 in a Cabinet or Enclosure

The following guidelines will help you plan your equipment cabinet configuration:

- Allow sufficient clearance around the cabinet or enclosure for maintenance;
- Make sure the internal temperature inside the enclosure does not exceed 50°C [122°F];
- Cables must be kept away from an electrical noise source, power lines and fluorescent lighting fixtures.
- Keep signal cables separated from power cables;
- The unit must be kept away from electrically conductive dust, water or moisture;
- When mounted in an enclosed cabinet, it is suggested to allow a space of at least 5 1/4" (3U) above each component for ventilation;
- Side support angles are required to install the unit in a cabinet.

2.2 Powering the ZPU-5000 Unit



🔥 Warning - Danger 🥂 Caution



- The ZPU-5000's power supply and grounding connection should be installed in accordance with national and local electrical norms.
- To ensure protection, the chassis grounding wire must be of a heavier or equal gauge than the wire associated with the AC input.

For safety purposes, a 15A circuit breaker should also be included in the AC-input wiring. Several instruments may be connected to a circuit protected by a circuit breaker. Each instrument must however have its own disconnection device.






2.2.1 Main Power Input

The ZPU-5000's main power input is equipped with a 3-position panel header and a threaded flange. also comes with a mating connector and a screw flange. See illustration below for reference.







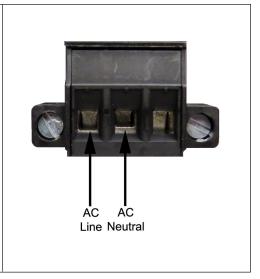

Electrical Characteristics

Input voltage range: 100-240 V_{AC}

Line frequency: 50-60 Hz

Power consumption: 65W Max.

Fuse replacement: 3.15A / 250V slow-blow, 5x20mm

Recommended wire size: 1,5 mm² [16 AWG] (300V rating)

2.2.2 Protective Conductor Terminal



The protective conductor terminal must be connected to a grounding point in compliance with local regulations. Grounding is essential for safety purposes as well as to provide better efficiency against ESD and EMI disturbances.


Electrical Characteristics

Wire size: at least 1,5 mm² [16 AWG], up to 6 mm² [10AWG]





Dual-Channel Analog Input / Output Modules

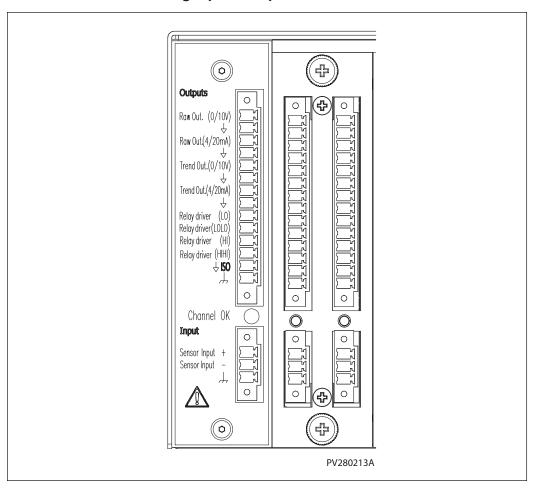

Analog input/output modules are two-channel electronic cards capable of converting input signals according to selected processes and generating corresponding analog signals. A ZPU-5000 unit can accept up to eight analog input/output modules. For each input channel, the data is processed according to the sensor's configuration in ZOOM. Processed raw and trend outputs are then available in both 4 to 20 mA and 0 to 10V formats for real-time monitoring.

Important Information

- The raw output does not correspond to the sensor's signal and is called processed raw in this manual;
- The processed raw output signal's frequency content is still present, but adapted according to the sensor's configuration in the ZOOM software.

Each channel on the analog input/output module accomplishes five tasks:

- Performs a selected process on an input signal;
- Detects alarms (performs comparisons between alert and danger threshold levels);
- Determines the alarm type (increasing or decreasing value);
- Produces an analog output (4 to 20 mA and 0 to 10V) that represents the processed raw value;
- Produces an analog output (4 to 20 mA and 0 to 10V) that represents the trend value.





2.3.1 Processes for Trend Outputs

The trend outputs oversee 8 different value types that can be selected one at a time:

- Raw signal value (no process applied, linear output);
- · Air gap or blade tip value;
- RMS value:
- Peak value;
- · Peak to peak value;
- Maximum value:
- Minimum value;
- Average.
- A) Raw Signal: The output signal from certain types of measuring chains comprised of both AC and DC components or slow evolving parameters comprised of a slow DC component such as temperature, meter levels, etc.

In such cases, the "raw signal value" can be selected for an unprocessed signal.

- **B)** Air Gap or Blade Tip: The minimum of each pole (or blade) is detected by the air gap pole detector. This detector does not have a finite window as it uses the signal's shape to find the corresponding minimum for each pole (or blade).
- **C) RMS:** Some applications favor the use of RMS (Root Mean Square) values of acceleration and velocity readings for vibration measurements. The RMS value process uses only the AC component of the input signal.
- **D) Peak:** Some applications favor the use of the peak value of acceleration and velocity readings for vibration measurement. The peak value process uses only the AC component of the input signal.
- **E) Peak-to-Peak:** Some applications favor the use of the peak-to-peak value of displacement readings for vibration measurement. The peak-to-peak value process uses only the AC component of the input signal.
- **F) Maximum:** Some applications require the maximum value measured by a sensor. The maximum process detects and returns only the maximum values during a pre-determined time period.
- **G) Minimum:** Some applications require the minimum value measured by a sensor. The minimum process detects and returns only the minimum values during a pre-determined time period.
- **H) Average:** Some applications require the average value measured by a sensor. The average process determines the average value during a pre-determined time period.





2.3.2 Input Types and Module Specifications

All analog I/O modules have the same pinout but each module is factory-configured for a specific input source.

Input channel connectors are equipped with a 3-position panel header with a threaded flange as well as a mating connector with a screw flange.


Recommended wire size: 0,5 - 0,34 mm² [20 - 22 AWG]

A) 4 to 20 mA Current Input Module

Module Input Range		Maximum Processed Range (BW)	
AGM-4/20	4 to 20 mA	According to Air Gap Measuring Chain (DC to 1000Hz)	
CIM-4/20 4 to 20 mA		According to Measuring Chain (DC to 1000Hz)	

Note: The modules do not supply power to the measuring chain. An external power supply is required.

Connection

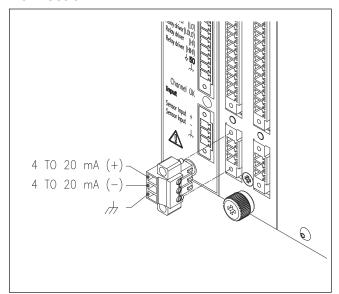


Input Channel Characteristics

Input Impedance: 200 Ω

Important Information


Modules are shipped with JP1 and JP2 jumpers installed.

Jumpers are available on the circuit to allow a grounded or ungrounded **4 to 20 mA** loop. See illustration below.

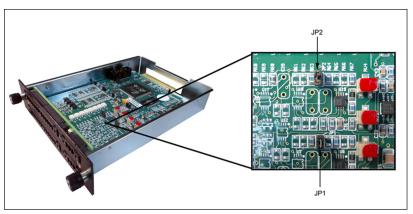

JP2 - Channel 1: jumper installed = grounded jumper removed = ungrounded

JP1 - Channel 2: jumper installed = grounded jumper removed = ungrounded

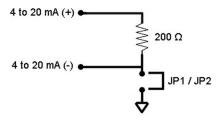






B) Fiber Optic Accelerometer (FOA) Input Module

			Maximum Processed Range (BW)		
Module	Input Range	Input Sensitivity	Acceleration	Velocity	Displacement
FIM-40-100	0 to 40g Peak	100 mV/g	40g Peak	100 mm/s Peak	2000 um Peak-to-Peak
			(15 to 1000Hz)	(30 to 1000Hz)	(30 to 1000Hz)

Note: The modules do not supply power to the measuring chain. An external power supply is required.

Connection

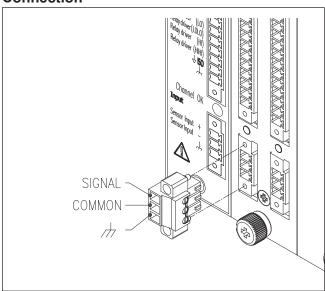






C) Piezo Electric Accelerometer (ICP) Input Module

			Maximum Processed Range (BW)		
Module	Input Range	Input Sensitivity	Acceleration	Velocity	Displacement
ICPM-1.13-500	1.13g Peak	500 mV/g	1.13g Peak	28 mm/s Peak	2000 um Peak-to-Peak
			(0.7 to 1000 Hz)	(0.7 to 1000 Hz)	(0.7 to 1000 Hz)
ICPM-1.13-100	1.13g Peak	100 mV/g	1.13g Peak	28 mm/s Peak	2000 um Peak-to-Peak
			(0.7 to 1000 Hz)	(0.7 to 1000 Hz)	(0.7 to 1000 Hz)
ICPM-5.65-100	5.65g Peak	100 mV/g	5.65g Peak	28 mm/s Peak	2000 um Peak-to-Peak
			(0.7 to 1000 Hz)	(0.7 to 1000 Hz)	(0.7 to 1000 Hz)

Note: ICP accelerometers are powered by the analog module with a constant current voltage source.

Connection

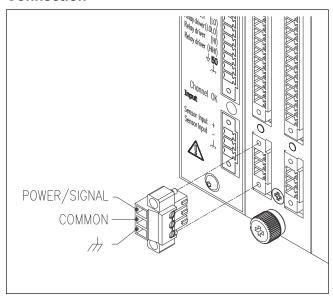






D) Voltage Input Module

Module	Input Range	Maximum Processed Range (BW)
VIM 0/+5	0 to 5V	According to Measuring Chain (DC to 1000Hz)
VIM -5/+5	-5 to 5V	According to Measuring Chain (DC to 1000Hz)
VIM 0/10	0 to 10V	According to Measuring Chain (DC to 1000Hz)
VIM -10/+10	-10 to 10V	According to Measuring Chain (DC to 1000Hz)
VIM -2/-18	-2 to -18V	According to Measuring Chain (DC to 1000Hz)

Connection

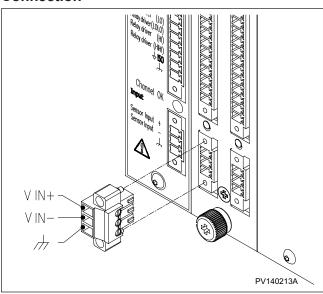





2.3.3 Output Connections and Specifications

- Raw Outputs: Analog outputs that represent the processed raw signal (See Important Information under section 2.3"Dual-Channel Analog Input / Output Modules" on page 14) from the sensor on the corresponding input channel.
- **Trending Outputs**: Analog outputs representing the selected processed signal from the sensor on the corresponding input channel.

Voltage Output

- Output range: 0 to 10V

- Load: 10 kΩ min.

- Processing range: According to ZOOM Configuration

· Current Output

- Output range: 4 to 20 mA

- Load: 500 Ω max.

- Processing range: According to ZOOM Configuration

Relay Driver Outputs

- Output type: Bipolar FET, ± 30V / 25 mA max. isolated ground


- Output state: Transistor **OFF** = no alarm

Transistor **ON** = alarm detected

The output channel connector is equipped with a 14-position panel header with a threaded flange as well as a mating connector with a screw flange.

Recommended wire size: 0.5 - 0.34 mm² [20 - 22 AWG]


The following schematic illustrates a summarized view of the possible connections available on the 14-position output channel connector.

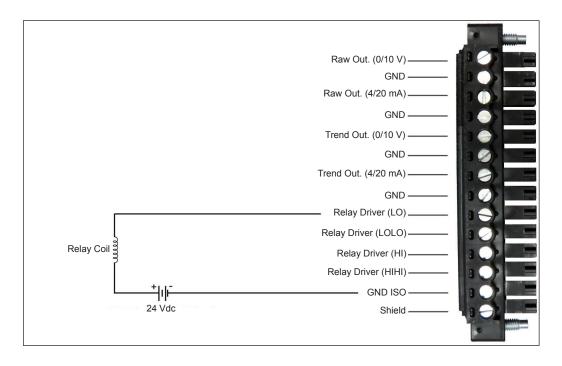






2.4 Control Module

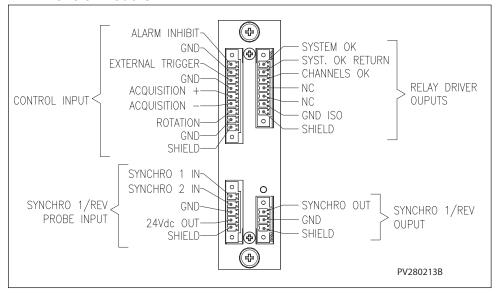

2.4.1 Control Module Connections and Specifications

The control module oversees four signal types:

- · Synchro. 1/rev. probe input;
- · Synchro. 1/rev. probe output;
- · Control Inputs;
- · Relay driver outputs.
- A) Synchro. 1/rev. Probe Input: Two inputs that receive a one-per-revolution pulse (the synchronization signal) from one (unidirectional units), or two (bi-directional, pumped-storage generators) synchronization probe(s). The ROTATION input signal determines which synchro signal input is active on a bi-directional unit. A closed contact on the ROTATION input sets SYNCHRO 1 IN as the active input; an open contact on the ROTATION input sets SYNCHRO 2 IN as the active input.

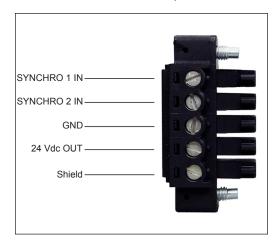

In the **ZOOM Configuration** software, the *Automatic Direction Detection* setting can be configured and the *Rotation Direction* can be associated when the rotation control input contact is closed either in a clockwise or counterclockwise position. It is also possible to adjust the synchronization pulse threshold for a probe with a voltage output instead of a transistor output.

Synchro signal inputs (2 x);

Input type: pull up to 24Vdc;

Control type: NPN open collector proximity switch.

• 24Vdc output to power the synchronization probe(s).

The SYNCHRO 1/Rev Probe Input connector is equipped with a 5-position panel header with a threaded flange as well as a mating connector with a screw flange.

Recommended wire size: 0.5 - 0.34 mm² [20 - 22 AWG]








Important Information


- · Always use SYNCHRO 2 IN as the default input for the synchronisation signal.
- B) SYNCHRO 1/rev. Probe Output: Used to view the SYNCHRO 1/Rev. pulse on an instrument other than the ZPU-5000.
 - Output type: NPN collector with resistor pull-up to 5 V

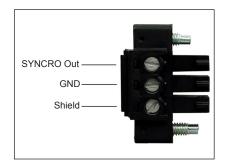

The SYNCHRO 1/Rev probe output connector is equipped with a 3position panel header with a threaded flange as well as a mating connector with a screw flange.

Recommended wire size: 0.5 - 0.34 mm² [20 - 22 AWG]

C) Control Inputs: a set of inputs for the control of four system features from remote switching devices. The illustrations below represent these four system features.

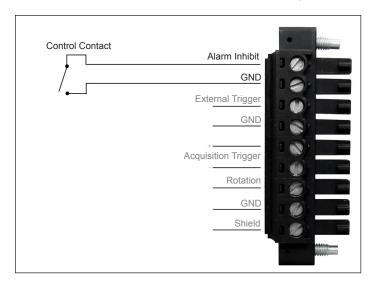

- 1. Alarm Inhibit: an input used to disable all alarm functionalities;
 - Input type: 10 kΩ pull up resistor to 24 Vdc;
 - Control Type: dry contact or electronic switch.


Control contact: open = alarm enabled;

Control contact: closed = alarm disabled.


Voltage threshold: 3.7 V.





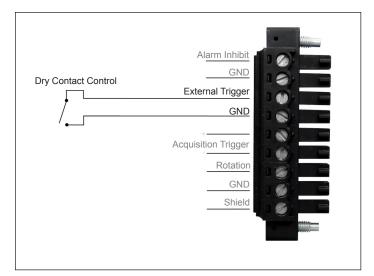


- External Trigger: An input used to start a sampling or pole measurement. The measurement type can be selected in the ZOOM Configuration software.
 - Input type: 10 kΩ pull up resistor to 24 Vdc;
 - Control type: dry contact or electronic switch.
 Triggers on a falling edge.
 - · Voltage threshold: 3.7 V.

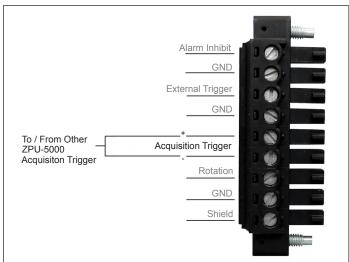

3. **Acquisition Trigger**: a bi-directional port used to allow a master ZPU-5000 unit equipped with an air gap sensor to share a 1/pole reference signal to slave ZPU-5000 units not equipped with an air gap sensor.

This is all configurable in the ZPU-5000's properties with the help of **ZOOM Configuration**.

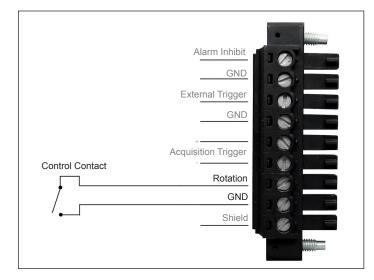

- 4. Rotation: an input used to indicate the unit's rotation direction (pumped-storage units) and select the appropriate synchronization probe. A more precise configuration is possible in ZOOM Configuration
 - Input type: 10 kΩ pull up resistor to 24 Vdc;
 - Control Type: dry contact or electronic switch.

Control contact: open = SYNCHRO 2 IN; Control contact: closed = SYNCHRO 1 IN.

Voltage threshold: 3.7 V.






The control input connector is equipped with a 9-position panel header with a threaded flange as well as a mating connector with a screw flange

Recommended wire size: 0.5 - 0.34 mm² [20 - 22 AWG]

D) Relay Driver Outputs: A set of outputs used to drive relays and keep the user informed about system events such as **System OK** and **Channels OK**. The illustration below shows a configuration with multiple ZPU–5000 acquisition units.

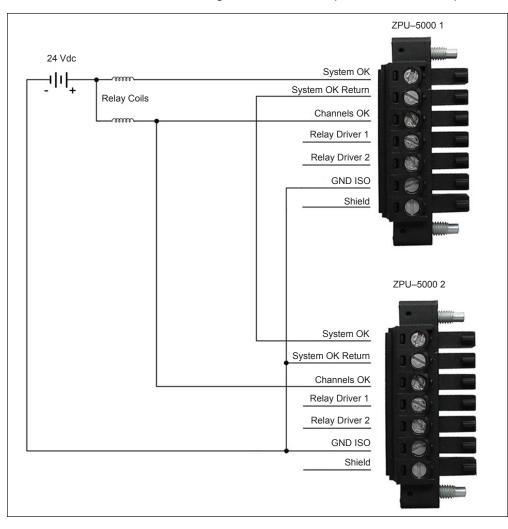

Note: Relay drivers 1 and 2 are available for optional configurations using the ZOOM software.

- Output type: Bipolar FET, ± 30V / 25 mA max. isolated ground;
- · Output state:

Transistor **OFF** = no alarm

Transistor **ON** = alarm detected

The relay driver output connector is equipped with a 7-position panel header with a threaded flange as well as a mating connector with a screw flange.


Recommended wire size: 0.5 - 0.34 mm² [20 - 22 AWG]





2.5 Communication Module

Wiring Connections

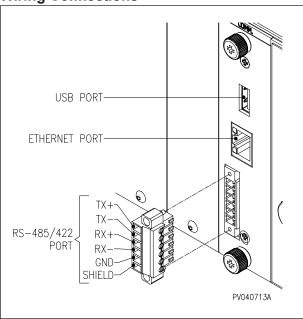

USB Port


The USB port allows connection of a portable storage device to copy the configuration or to update the firmware.

Ethernet Port

A 10/100 Mbps port for communication with the ZOOM software through a CAT6-E cable (recommended).


RS-485/422 Port

The user can choose between half-duplex (RS-485) or full-duplex (RS-422) communication with TWS and RTU protocols directly in the **ZOOM Configuration** software. A hardware configuration is also required via the COMM-100 module by changing the **ON** and **OFF** jumpers as illustrated below:

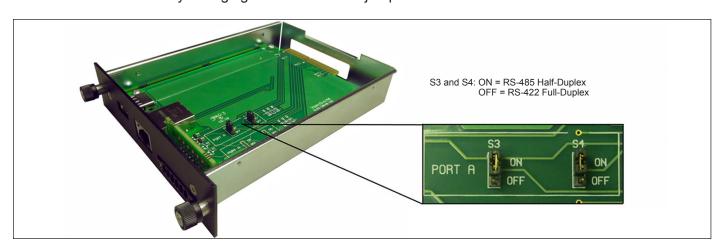





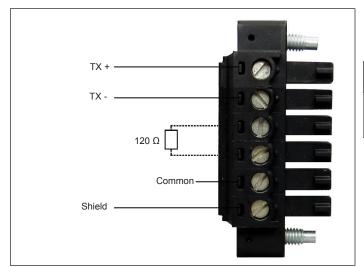


RS-485 in half duplex mode, typical connection.

Note: Jumpers S3 and S4: ON

Important Information

- 120 Ω termination resistor is only installed on the LAST UNIT of a chain.

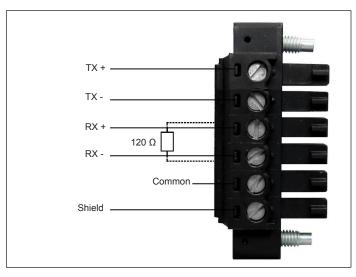

RS-422 in full-duplex mode, typical connection.

Note: Jumpers S3 and S4: OFF

Important Information

- 120 Ω termination resistor is only installed on the LAST UNIT of a chain.

The RS-485/422 port connector is equipped with a 6-position panel header with a threaded flange as well as a mating connector with a screw flange.

Recommended wire size: 0.5 - 0.34 mm² [20 - 22 AWG]

Important Information

• Modules are shipped with S3 and S4 jumpers in the ON position (RS-485) and a 120 Ω termination resistor installed.





3. USING THE ZPU-5000 UNIT

3.1 Front Panel LED Indicators

SYSTEM OK

Turns **Yellow** upon startup, then turns **Green** as long as the system is operating correctly. Also indicates that the ZPU–5000 is properly connected to its ZOOM ZPU5000 service in ZOOM server.

Turns **Orange** when a system component malfunction occurs, such as a ZOOM plug-in or ZPUManager interruption, a network connection error, or other malfunction types.

Flashes **Yellow** when files are copied from a USB key and turns **Yellow** once the copying process is completed.

CHANNELS OK

Turns **Yellow** upon startup, then turns **Green** after the firmware has completed booting and all measuring chains are confirmed as functional. Remains **Green** as long as all measuring chains are functional.

Turns **Orange** when one measuring chain or more becomes saturated (defective sensor, faulty connection).

ALARM ACKNOWLEDGE

Turns **Orange** upon startup, then turns **Green** to confirm that no new alarm has been triggered and that all prior alarms have been acknowledged.

Turns **Orange** when an event has triggered an alarm awaiting to be acknowledged.

CHANNEL ALERT/DANGER

Turns **Red** upon startup, then turns **OFF** until an alarm event occurs.

Turns **Yellow** when an alert type event (a measurement has reached the first threshold) has occurred and remains **Yellow** as long as the alert condition remains.

Turns **Red** when a danger type event (a measurement has reached the second threshold) has occurred and remains **Red** as long as the alert condition remains.





3.2 Startup (Boot Sequence)

The ZPU-5000 loads the last configuration used. A new configuration is loaded when required by the user. The entire boot sequence can last up to 2 minutes.



 The VFD is blank and all LEDs light up for approximately 35 seconds in the following initial colors:

SYSTEM OK: Yellow CHANNELS OK: Yellow

ALARM ACKNOWLEDGE: **Orange**CHANNELS ALERT / DANGER: **Red**



2. A message appears on the VFD to announce the start of the boot sequence.



3. The ZPU-5000 network address is displayed, and all applicable service plug-ins are started. Square brackets around the ZPU-5000 network address indicate that the acquisition unit is not connected to the network yet.











4. The unit uploads the configuration available on the network.

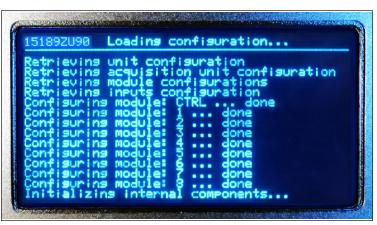

5. The configuration is loaded, and the components are initialized.

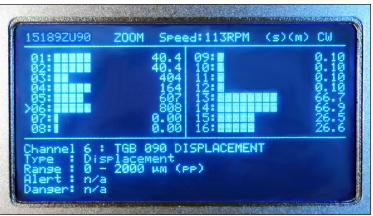

6. Finally, the system starts normal operation, and the VFD shows real-time information. Round brackets around the ZPU-5000 network address indicate that the acquisition unit is now connected to the network.





Manual Firmware Update




Important Information

- A USB key with firmware update information must be prepared using ZOOM Update;
- This procedure applies only for first-time updates to version 7.3.

Insert the portable memory device containing new firmware and configurations into the USB port. Five elements may be updated:

- Analog input/output module firmware;
- Control module firmware:
- Operating system;
- ZPUManager;
- All plug-in installations.

Except for the module firmware update, which takes several minutes to complete, all modifications are completed in just a few seconds. When updating a module firmware, messages are displayed to view the operation's progress:

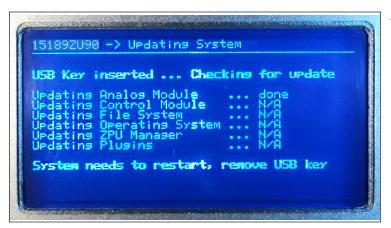

1. First, insert the USB key. The **SYSTEM OK** LED will blink **Yellow** during the data transfer.



Caution

· Do not remove the USB key while the SYSTEM OK LED flashes Yellow.

A screen shows the update progress. Once the data transfer is completed, the SYSTEM OK LED will turn Orange and remain this way until the USB key is removed.


190 – **Un**it is rebooting... : www.UibroSystM.com Email: techsupp@vibrosystm.com

2. Once the USB key is removed, the unit will display a message indicating that the reboot process has been initiated.







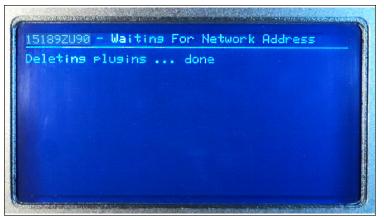

3. The update procedure starts by erasing the contents of the ZPU-5000 acquisition unit flash memory.




4. The next step consists of uploading the new firmware onto the module's flash memory. This operation takes 3 to 4 minutes to complete for each module.



⚠ Caution

• Do not disconnect the ZPU-5000 during the update process.

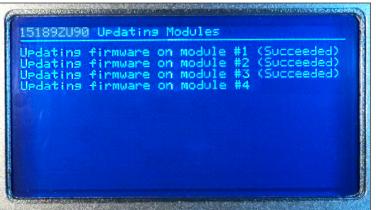

5. Once the operation is completed on a module, a message is displayed to confirm that the update was successful. If another module is installed, the updating program then proceeds with the next one.








6. Once all modules have been updated, the configuration is reloaded and the system starts normal operation.

3.4 Display During Normal Operation

The illustration below illustrates a typical ZPU-5000 VFD during normal operation.

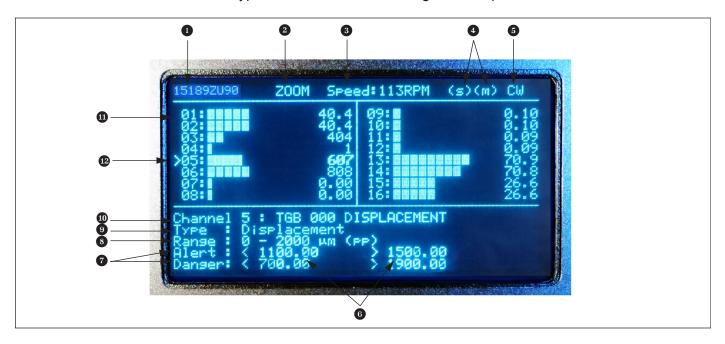

- The pre-configured address allows quick connection validation to the network and the server. The ZPU-5000's serial number is used to identify the unit:
 - (00000XX00) The acquisition unit has received an IP address and is connected to ZOOM Server;
 - [00000XX00] The acquisition unit has an IP address but is not connected to ZOOM Server;
 - 00000XX00 The acquisition unit does not have an IP address and is not connected to ZOOM Server.

The address can be made up of 2 or 9 characters. Unlike a 9-character address which is fixed and cannot be modified, a 2-character one can be modified at will, either for another 2-character address or a 9-character one.

- Indicates if the unit is connected to the ZOOM software or in standalone mode.
- Indicates the unit's speed in RPM.





- Indicates status flags for the synchronization probe and modulation signal:
 - (s) = A synchronization probe is detected;
 - (m) = A modulation signal is detected (moving poles).
- Indicates the unit's rotation direction: CW = clockwise, CCW = counterclockwise.
- 6 Indicates alarm levels set for this input channel:

Lo = lower threshold - Alert level

LoLo = lower threshold - Danger level

Hi = upper threshold - Alert level

HiHi = upper threshold - Danger level

- Indicates the configured trending and alarm range.
- 3 Indicates the unit of measurement selected for the sensor with processing, if any.

(raw) = Raw value

(rms) =RMS value

(p)= Peak value

(pp) = Peak to peak value

(max) =Maximum value

(min) =Minimum value

(avg) =Average value

Indicates input parameter types associated with this sensor:

Air Gap Force Relative Vibration

Absolute Vibration Level Speed
Active Power Magnetic Flux Strain

Blade Tip Clearance Mass Temperature

CurrentPhaseTorqueDisplacementPositionVelocityEccentricityPressureVoltage

Flow Reactive Power Custom Parameters

- Indicates a channel name assigned by the user in the ZOOM Configuration software. The description may contain up to 32 characters, however only the first 28 characters are displayed.
- Indicates the status of each input. Depending on the number of modules installed, the table can contain up to 16 inputs. A moving bar graph displays a real time visual cue of the present value. Each half bar represents 8% of the total range.
- Indicates the cursor used to toggle between channels. Channel information is displayed at the bottom of the screen. Pressing ENTER gives access to the sensor's additional parameters (frequency bands, air gap).






3.4.1 Accessing Frequency Band Parameters

The ZPU-5000's acquisition module is fully programmable and designed for monitoring specific frequencies and protecting fixed components on large rotating units. It performs high speed acquisition for advanced analysis as well as alarm surveillance on either a broadband frequency range or specific, user-selected frequency bands.

Pressing **ENTER** on a channel will display the sensor's frequency band parameters.

Important Information

 Frequency band values are only displayed once the vibration option has been selected in the module configuration window of the ZOOM Configuration software. A firmware will be automatically installed on the module.

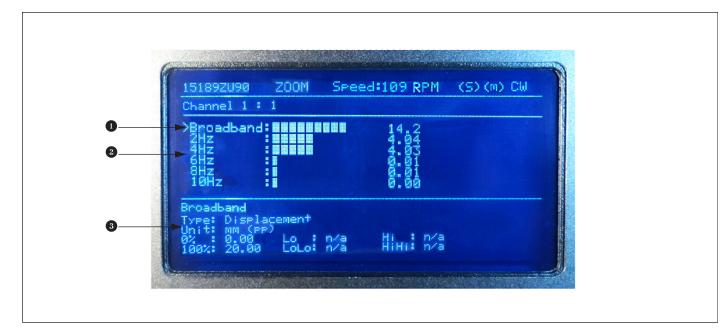


- Displays broadband values for a given sensor.
- 2 Displays frequency band values for a given sensor. Represents amplitude in correlation with frequency. Up to 5 different frequency bands can be observed.
- The information that appears in this section reflects which band has been highlighted with the cursor: broadband or frequency band. This window is also available if the parameter is not configured for frequency band surveillance, however, only broadband values will be displayed.





3.4.2 Accessing Air Gap Parameters

Pressing **ENTER** on an AGM-4/20 channel will display the sensor's minimum air gap value, and if programmed, the maximum rotor pole variation over one turn.

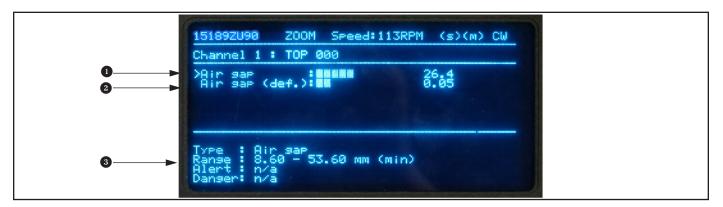

The AGM-4/20 acquisition module can be programmed to trigger two types of alarms on air gap measurements.

- Air gap value (alarm on minimum air gap)
- 2 Average air gap variation (alarm on rotor deformation)
- 3 The information that appears in this section reflects which air gap measurement has been selected with the cursor: minimum air gap, or rotor deformation.

A base reference measurement is used to calculate the threshold values for each rotor pole. An alarm on rotor deformation is triggered when the air gap of at least one rotor pole exceeds the threshold value set for that pole in the reference measurement.

When an alarm is triggered, the bar graph is displayed in high luminosity, and the message Alert or Danger is displayed on the right of the value.

```
Type : Air sap
Ranse: 8.60 - 53.60 mm (min)
Alert: n/a
Danser: n/a
Danser: n/a
```








3.5 ZPU-5000 Controls

3.5.1 User Interface

The front panel user interface consists of a seven-button keypad and a VFD screen display.



3.5.2 Keypad

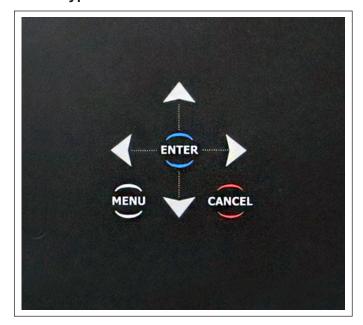

The **MENU** button is used for toggling in and out of **Menu** mode.

The **ENTER** and **CANCEL** buttons are used for:

- Moving to the next / previous menu levels;
- · Confirmation / cancellation of an entry.

The four directional buttons emulate a pointing device, and are used for:


- Browsing through the options in a menu;
- Placing the cursor at a selected position when entering data;
- Scrolling through available monitoring displays and headers.





3.6 ZPU-5000 Menus

The menus are organized in a tree structure, with main options leading to sub-menus. The following illustration is a "map" of the possible commands.

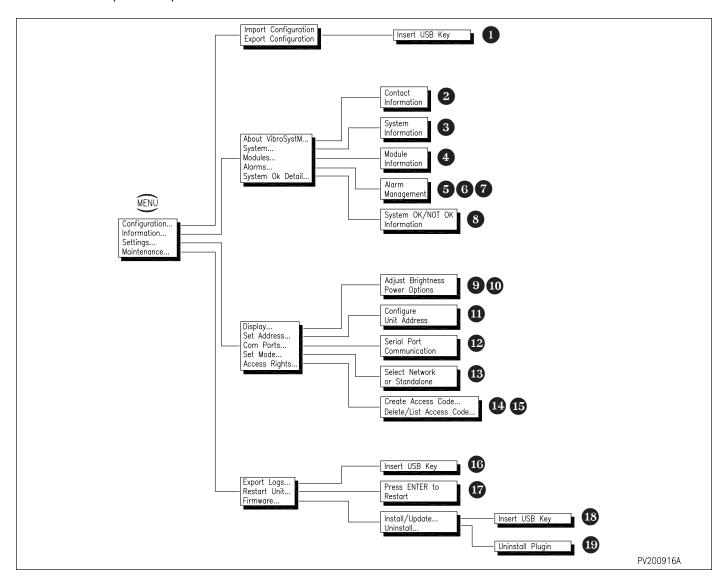

3.6.1 Browsing Through the Menus

The following are directions on how to browse through the menus and execute various commands. Always use the tree structure above as a reference.



• Only **Admin** type users have access to all menus. For further details, refer to the "Creating Users and Attributing Access Rights" section on page 40.





Importing / Exporting a Configuration

- · Press the MENU key.
- Configuration \rightarrow Import / Export Configuration

In this screen, the user is prompted to insert a USB key to import or export a configuration. The unit restarts automatically after importing/exporting.

2 Contact Information

- · Press the MENU key.
- Information → About VibroSystM

This screen displays VibroSystM contact information such as the company website, technical support's email address, phone and fax numbers.

3 ZPU-5000System Information

- Press the MENU key.
- $\bullet \ \, \text{Information} \to \text{System}$

This screen displays system information:

Unit Address;

Unit Version;

Unit OS Version:

Unit IP Address;

All Plug-ins including versions that are presently on the unit (ex:Plugin ZPU5000).

4 Module Information

- Press the MENU key.
- Information → Modules

This screen displays information about the operation of various modules in the form of a table:

Modules	T (C/F)	%CPU	Version
Module #1 :	47/117	60	2.7.8
Module #2 :	52/126	62	2.7.8
Module #3 :	52/126	63	2.7.8
Module #4 :	53/127	63	2.7.8
Module #5 :	42/108	65	2.7.8
Module #6 :			
Module #7 :			
Module #8 :			
Module #9 :	N/A	N/A	1.1.1





Exporting Alarms

- Press the **MENU** key.
- Information \rightarrow Alarms \rightarrow Export Alarms

The user is prompted to enter a USB key and press ENTER. The exportation is done automatically. Follow instructions on the following screens.

Important Information

• The View/Acknowledge and Acknowledge All tabs only appear when alarms have been triggered. If no alarms are triggered, only the Export Alarms tab appears.

Viewing / Acknowledging Alarms

- Press the **MENU** key.
- Information → Alarms → View/Acknowledge

This screen allows the user to view active alarms one at a time. An alarm appears in the following way:

month/day/year - time - channel name

Press ENTER to view alarm details

DaHr (date & hour);

Level [Danger or Alert];

Value:

Sensor:

Pole:

Blade:

Acknowledge? - Press ENTER to acknowledge the alarm.

Acknowledging all Alarms

- Press the **MENU** key.
- Information → Alarms → Acknowledge All

This screen allows the user to acknowledge all active alarms at once by pressing ENTER.

Viewing SYSTEM OK / SYSTEM NOT OK Information

- · Press the MENU key.
- Information → System OK Detail

This screen gives the user a more thorough explanation on SYSTEM OK and SYSTEM NOT OK status (If **SYSTEM OK** only is displayed, everything is normal).

Adjusting VFD Brightness

- Press the **MENU** key.
- Settings → Display → Brightness

This screen allows the user to adjust the VFD's brightness.

Power Saving Options

- · Press the MENU key.
- Settings → Display → Power Options

This screen allows the user to program when the VFD turns off automatically to save power. The range varies from Never to a maximum delay of 25 minutes.





Attributing a Unit Address

- Press the MENU key.
- Settings → Set Address

This screen allows the user to program a unit address and enable or disable DHCP. The unit must be rebooted after changing these parameters.

When DHCP is set to No, three additional parameters appear that can be edited by pressing **ENTER**:

Static IP address:

Subnet Mask;

Default Gateway.

For more information regarding DHCP, please contact your network administrator.



Important Information

- On newer units (9183-06G00-21x), the COM Ports menu does not open even if a plug-in is installed. No modifications can be made from the ZPU-5000.
- On older units (9183-06G00-20x), the COM Ports menu opens allowing the user to modify the configuration. See step 12.

Viewing / Editing Serial Port Communication

- · Press the MENU key.
- Settings → COM Ports

In this screen, the user can use the keypad to switch the communication module's configuration: RS/485 Half Duplex or RS/422 Full Duplex.

Selecting Network or Standalone Mode

- Press the **MENU** key.
- Settings \rightarrow Set Mode

This screen allows the user to decide in which mode to operate the ZPU-5000 by pressing ENTER. The unit must be restarted after selecting the desired mode:

Connected to the ZOOM system (in a network through a server);

Standalone, not connected to ZOOM (not connected to a network).







Creating Users and Attributing Access Rights

- Press the MENU key.
- Settings \rightarrow Access Rights \rightarrow Create Access Code

This screen is used to create a new user and determine his/her access rights. The unit must be restarted after this configuration:

Access Code [4 characters];

Access Rights [Admin or Guest];

Validate & Save.

The following table shows the access rights for each user type.

Operation	Admin	Guest
Configuration → Browse	X	
Configuration $ o$ Modify	X	
Configuration → Import	Х	
Configuration → Export	X	Х
Information → About VibroSystM	Х	Х
Information → System	Х	Х
Information → Modules	X	
Information → Alarms	X	
Information → System OK Detail	Х	
Settings → Display	X	Х
Settings→ Set Address	X	
Settings → COM Ports	Х	
Settings $ o$ Set Mode	Х	
Settings $ o$ Create User	Х	
Settings → Delete/List Users	Х	
Maintenance → Export Logs	Х	Х
Maintenance → Restart Unit	X	Х
Maintenance → Firmware	X	

1 Viewing or Deleting Existing Users

- Press the **MENU** key.
- Settings \rightarrow Access Rights \rightarrow Delete/List Access Codes This screen is used to view existing users and delete them by pressing **ENTER**.
- 16 Exporting Log Files
 - Press the **MENU** key.
 - Maintenance → Export Logs

In this screen, the user is prompted to insert a USB key to export log files.





0

Important Information

· Before restarting the unit, read all warnings that appear on the VFD.

Restarting the Unit

- Press the MENU key.
- Maintenance → Restart Unit
 This screen allows the user to restart the unit by pressing ENTER.

18 Installing / Updating a Firmware

- Press the **MENU** key.
- Maintenance → Firmware → Install/Update
 Refer to section 3.3"Manual Firmware Update" on page 30 for instructions.

19 Uninstalling a Firmware

- Press the MENU key.
- Maintenance → Firmware → Uninstall
 In this screen, the user can select a firmware and delete it by pressing ENTER.





4. TROUBLESHOOTING

If your ZPU-5000 unit is not operating as expected, verify the following tips, they should help you resolve most common issues.

4.1 Power Supply

If the LED indicators and the display screen do not light up upon startup, verify the power supply.

First, read the voltage level at the rear of the unit with a portable meter. Make sure the unit receives recommended power from an AC source (100 to 240 VAC, 50-60 Hz).

- If the acquisition unit does not receive power, verify the source wiring, starting with the external circuit breakers protecting the unit;
- If the acquisition unit receives power, verify the fuses in the fuse-holders (at the rear of the acquisition unit).
- If the acquisition unit still fails to respond, contact VibroSystM for further assistance.

4.2 Boot-Up

Verify the boot-up sequence by observing the LED indicators and VFD. A normal startup can take up to 2 minutes. See "3.2 Startup (Boot Sequence)" on page 28 for the correct boot sequence.

Verify the following:


- If the information on the VFD is different from the boot sequence, the firmware may be incorrect and will need to be reinstalled:
- If the LED indicators and VFD do not turn on, a major power supply or main component failure has occurred. Contact VibroSystM for further assistance.

4.3 Network Connection

All ZPU-5000 units need to be connected to a TCP/IP network. The unit can be configured either by:

- a) Attribution of an IP address through DHCP. The unit must be connected to a router or a server with Windows Server® to obtain its IP address;
- b) Attribution of an IP address using the front panel keypad.

On the communication module, at the rear of the unit, verify the two LED indicators on the Ethernet port:

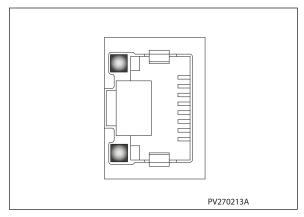

- The bottom LED should light up to confirm the link to a 100 Mbps network and the top LED flashes when there is activity on the network;
- If the LEDs show no activity, perform verifications at the software level;
- If the acquisition unit is configured through DHCP, use the front panel keypad to confirm that an IP address was obtained from DHCP;
- If the acquisition unit's IP address was entered manually, verify that the address does not already exist on the network and that its parameters (mask and gateway) are correct;
- If the configuration includes more than one acquisition unit, verify that a unique IP address is assigned to each. This should be the same for the address designating the equipment.





4.4 Analog Input / Output Modules

Verify the startup procedure of the analog input modules:

- The LED indicators should light up **Orange** for 2 seconds upon startup, then turn either **Green** or **Red** depending on the status of the measuring chain connected to the module;
- In some instances, it is normal for the LED to briefly turn **Green** before switching to **Red**.

Verify, on the VFD, that the status of each measuring chain confirms the LED indicator color on the corresponding analog input module.

• If the LED indicators at the rear of a module remain **Orange**, a firmware problem has been encountered and new firmware must be reloaded into the acquisition unit. See "3.3 Manual Firmware Update" on page 30.

The VFD displays each module's status. Verify the message associated with each channel:

- If a bar graph and a numerical value are displayed, it means the parameter is correctly read;
- If the message **NotOK** is displayed, an out of range problem has occurred. Verify the measuring chain connection and make sure the LED at the rear of the module is **Red**;
- If **NOTOK(T)** is displayed, the configuration does not match the module type;
- If NOTOK(F) is displayed, the firmware version is incorrect. See "3.3 Manual Firmware Update" on page 30
- If **NotOK(A/D)** is displayed, the A/D card is not working. Contact VibroSystM.
- If NotOK(V) is displayed, the configuration version does not match the software version;
- If **NotOK** (*) is displayed, the module is not responding;
- If **NotOK (C)** is displayed, there is a problem with the configuration;
- If the message **Stabilizing** is displayed, the sensor is connected but waits for the signal to stabilize before displaying a value;
- If the message **Waiting** is displayed, the sensor is connected and the signal has been stabilized but the server has not completed its trending calculation cycle.

4.5 CTRL-100 Module

Verify the control module's startup procedure:

- The LED indicator should turn **Green** for 2 seconds, blink three times, then flash a short pulse each time the ZPU–5000 receives the synchronization signal when the unit is in rotation. This confirms that the synchronization probe is present and operational
- If the LED indicator at the rear of the module remains **Orange**, a firmware problem has been encountered and new firmware must be reloaded into the acquisition unit. Refer to the firmware installation procedure See "3.3 Manual Firmware Update" on page 30.